


Platform Assembly

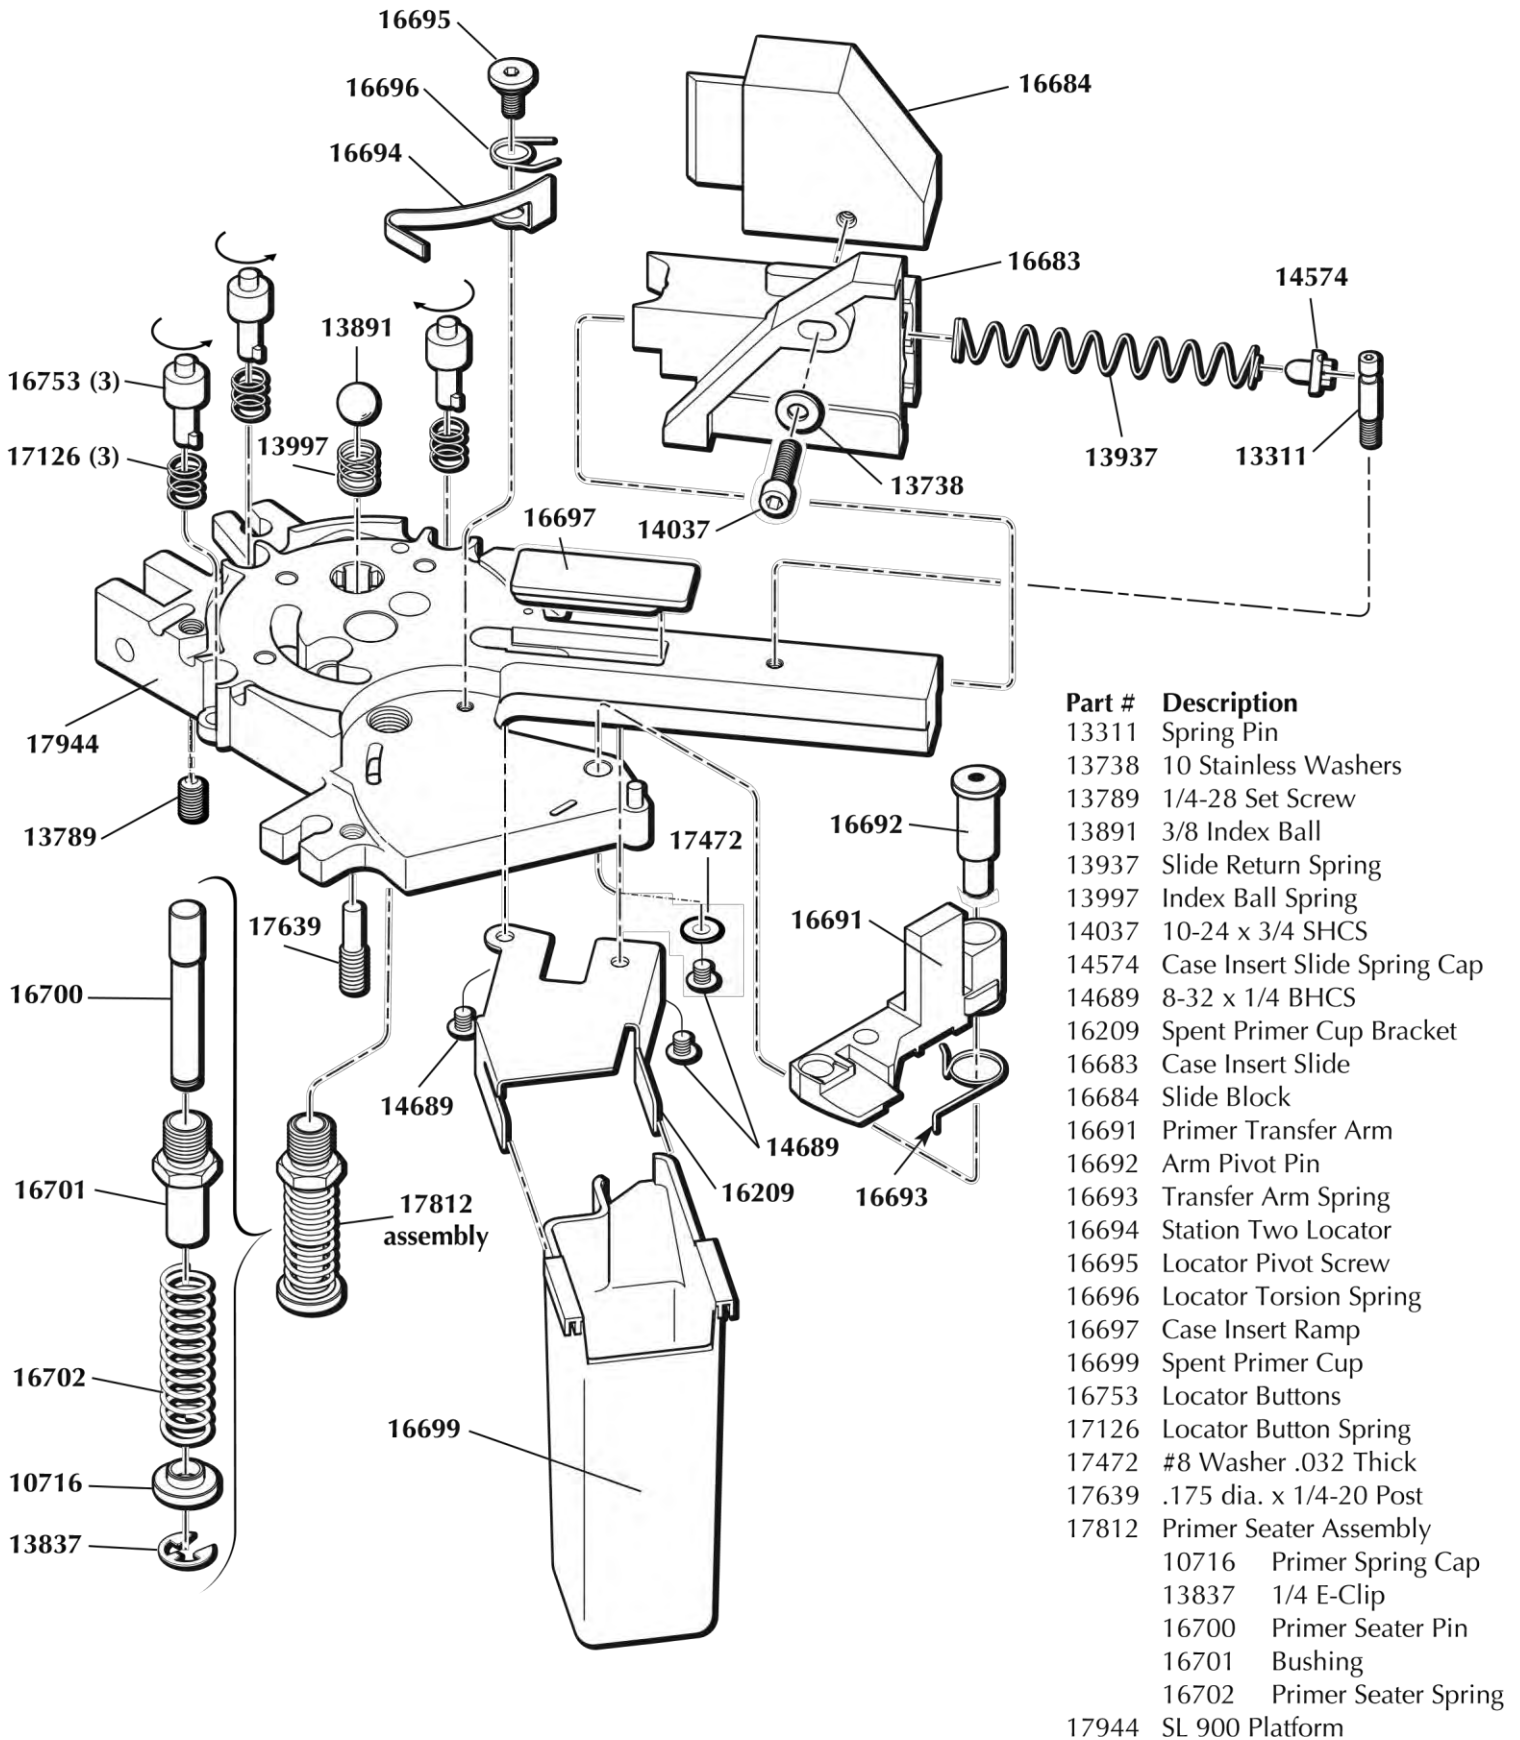

Part #	Description
13311	Spring Pin
13738	10 Stainless Washers
13789	1/4-28 Set Screw
13891	3/8 Index Ball
13937	Slide Return Spring
13997	Index Ball Spring
14037	10-24 x 3/4 SHCS
14574	Case Insert Slide Spring Cap
14689	8-32 x 1/4 BHCS
16209	Spent Primer Cup Bracket
16683	Case Insert Slide
16684	Slide Block
16691	Primer Transfer Arm
16692	Arm Pivot Pin
16693	Transfer Arm Spring
16694	Station Two Locator
16695	Locator Pivot Screw
16696	Locator Torsion Spring
16697	Case Insert Ramp
16699	Spent Primer Cup
16753	Locator Buttons
17126	Locator Button Spring
17472	#8 Washer .032 Thick
17639	.175 dia. x 1/4-20 Post
17812	Primer Seater Assembly
10716	Primer Spring Cap
13837	1/4 E-Clip
16700	Primer Seater Pin
16701	Bushing
16702	Primer Seater Spring
17944	SL 900 Platform